



Owner's Manual

Model FBPT-2



Important safety instructions.....	2
Assembly instructions.....	4
Description of canister and tools.....	6
Using the power nozzle.....	8
Replacing the bag.....	9
Replacing the filters	10
Power nozzle maintenance.....	11
Troubleshooting guide	14

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING: The manufacturer cannot accept responsibility for damage caused when the appliance is not used according to the instructions, or for uses other than those for which it was intended.

To reduce the risk of fire, electric shock or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- **WARNING: ELECTRIC SHOCK COULD OCCUR IF USED OUTDOORS OR ON WET SURFACES.**
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to your retailer for service.
- Do not pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without vacuum bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not attempt to service the unit while appliance is plugged in.
- Do not pull cord out of canister beyond the yellow tape.


SAVE THESE INSTRUCTIONS

Polarization Instructions

POWER CORD, 2-WIRE POLARIZED CORD

Household model FBPT-2

To reduce the risk of electric shock this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.

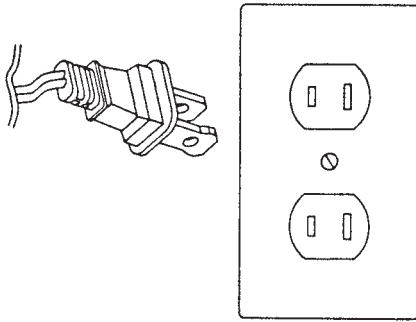

Assembly Instructions



Fig. 1

1. Slide the metal wand with the cord attached into the power nozzle aligning holes until it clicks into place. (See fig. 1)

2. Connect the second metal wand aligning holes until it clicks into place.
3. Insert the cord into the holders on the back of the wand. (See fig. 2)



Fig. 2



Fig. 3

4. Connect the hose handle into the top metal wand until it clicks into place.

5. Plug the cord into the handle.
(See fig. 3)

6. Connect the hose into the canister.

7. Feed the cord from the hose underneath the canister handle and plug it into the canister.
(See fig. 4)



Fig. 4

Description of Canister and Tools

- ① On / off button
- ② Cord rewind
- ③ Suction control
- ④ Parking system
- ⑤ Hose adapter
- ⑥ Bleeder valve (on handle)
- ⑦ Full bag indicator




Power Nozzle



Floor Tool



On-board Tools

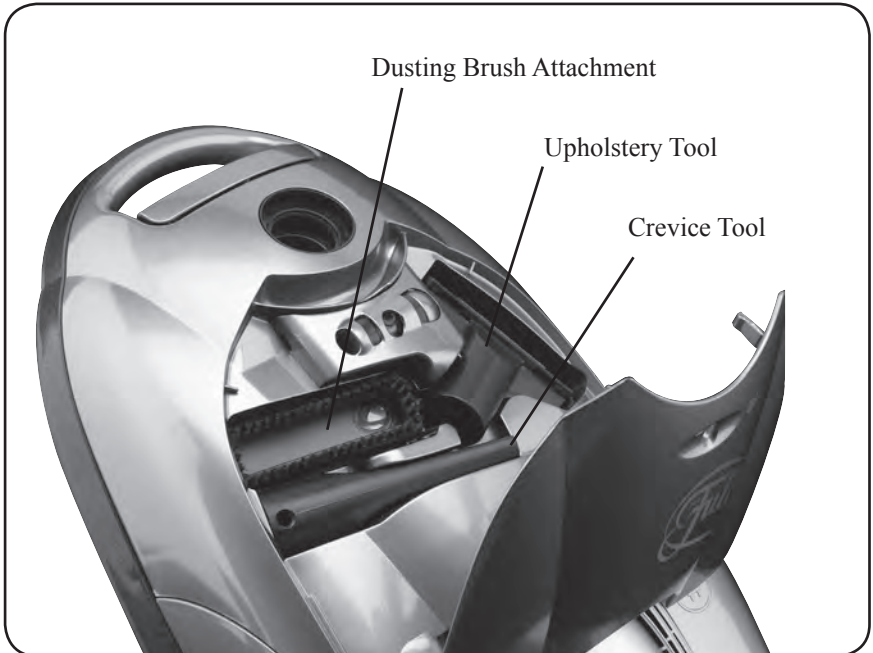

Using the Power Nozzle



Fig. 5

1. Turning on the power nozzle

The power nozzle can only be turned on if the canister is also turned on (canister on/off button is located on the canister body).

The power nozzle on/off button is located on the right side of the nozzle. (See fig. 5)

2. Using the power nozzle

While the power nozzle is off, step on the left side of the nozzle and pull the wand toward you. (See fig. 6)

Once the wand is in the reclined position, turn on the power nozzle and begin vacuuming.



Fig. 6



3. Removing the wand

Turn off the canister and power nozzle. Press in the first button at the bottom of the wand (approximately 4" up from the nozzle). Pull the wand up and out of the nozzle. (See fig. 7)

Replacing the Bag

It is recommended to replace the vacuum bag when the full bag indicator changes color or the suction power of the canister becomes weak.

1. Turn off the canister and power nozzle.
2. Remove the hose and unplug it from the canister body.
3. Open the bag compartment.
4. Remove the entire bag holder. **DO NOT THROW IT AWAY!** (See fig. 8)
5. Discard the full bag.
6. Insert a new bag by aligning the notch on the bag collar with the base of the bag holder. (See fig. 9) Lock the bag into place under the bag holder tab. Insert the bag holder by sliding the 2 prongs back into the canister body. (See fig. 8)
7. Close the bag compartment.



Fig. 8

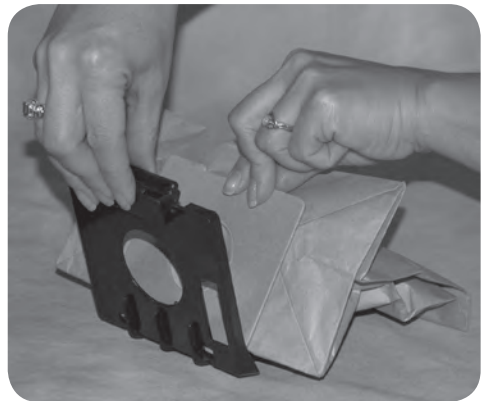


Fig. 9

Replacing the Filters

1. Replacing the secondary filter

Turn off the canister and power nozzle. Remove the hose. Open the bag compartment. Remove the filter from behind the bag. (See fig. 10) Either shake the dust out of the filter or wash it by hand. (Make sure the filter is completely dry before reinstalling.) Reinsert the filter and close the bag compartment.



Fig. 10

2. Replacing the HEPA filter

Turn off the canister and power nozzle. Remove the hose from the canister body. Open the bag compartment. Remove the filter from the top of the canister by pulling the tab on the filter toward you. (See fig. 11) Discard the old filter. Reinsert a new filter by sliding it back into the holder. Close the bag compartment.



Fig. 11

1. Removing the brushroll The brushroll may need to be removed at times to cut threads that have become tangled around it. Unplug the vacuum and remove the wand from the power nozzle. Turn the power nozzle over and remove the 5 screws to lift off the nozzle cover. (See fig. 12) Remove the brushroll from the belt side first. (See fig. 13)

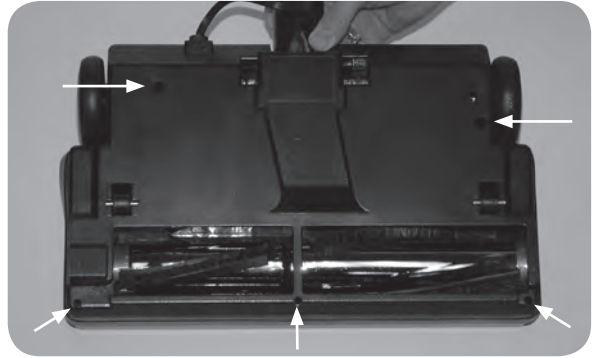


Fig. 12

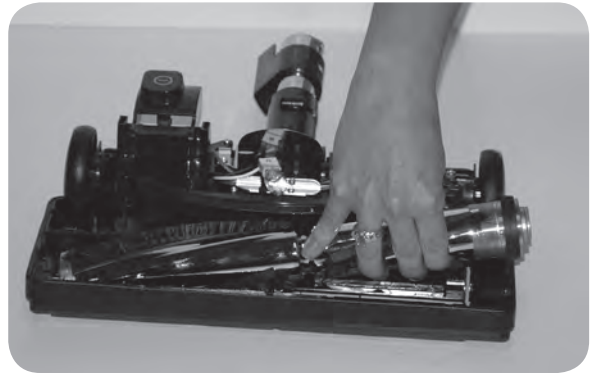


Fig. 13

2. Reinstalling the brushroll Place the brushroll back into the brushroll tray (make sure the belt is installed properly) with the rounded edge of the endcap facing down. (See fig. 14) Manually turn the brushroll to ensure that it spins freely. Replace the nozzle cover and the 5 screws. (See Replacing the nozzle cover on page 13).

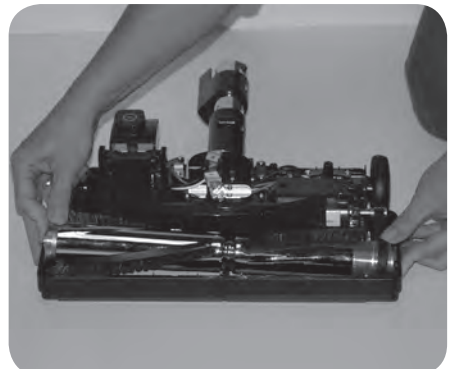


Fig. 14

Power Nozzle Maintenance continued

3. Replacing the belt

Remove the brushroll (see Removing the brushroll on page 11). Discard the old belt. Loop the new belt around the motor pulley. (See fig. 15) Align the belt ribs in the pulley grooves. Place the other end of the belt around the brushroll making sure the belt is seated in the belt grooves of the brushroll.

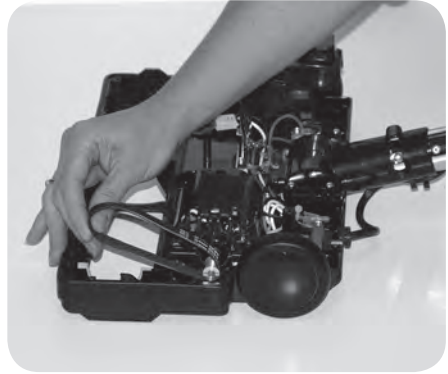


Fig. 15

Reinstall the brushroll (see Reinstalling the brushroll on page 11). Replace the nozzle cover and the 5 screws. (See replacing the nozzle cover on page 13).

4. Replacing the bulb

Turn the power nozzle over and remove the 5 screws to lift off the nozzle cover. (See fig. 12) Pull the bulb out (no twisting) and reinsert a factory authorized bulb. (See fig. 15) Replace the nozzle cover and the 5 screws. (See replacing the nozzle cover on page 11).

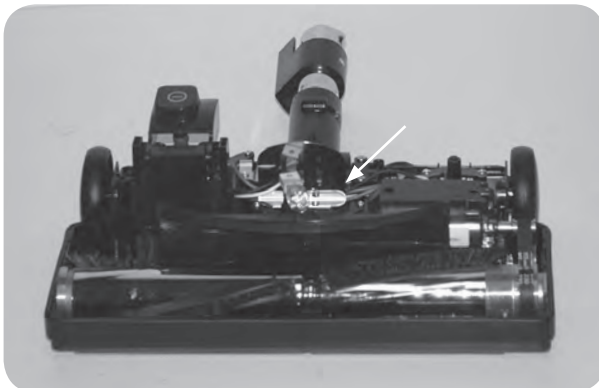


Fig. 16

5. Circuit breaker reset switch

This power nozzle is equipped with a circuit breaker safety system that protects it from jamming. Common items that cause jammed brushrolls include socks, excessive threads, corners of area rugs, etc.

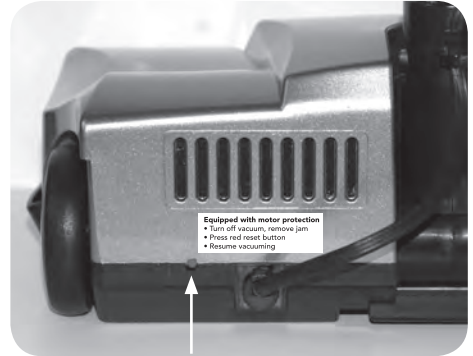


Fig. 17

To reset the circuit breaker:

- Turn off the vacuum cleaner and unplug the power cord.
- Remove the object preventing the brushroll from turning.
- Press the red button on the back of the nozzle to reset the breaker.
(See fig. 17)
- Resume vacuuming.

6. Replacing the nozzle cover

Identify the two ribs on the underside of the nozzle cover (See fig. 18) Slide the ribs into the slots that are on either side of the curved wall behind the brushroll. (See fig. 19) Push the nozzle cover down on to the bottom tray. Replace the 5 screws.

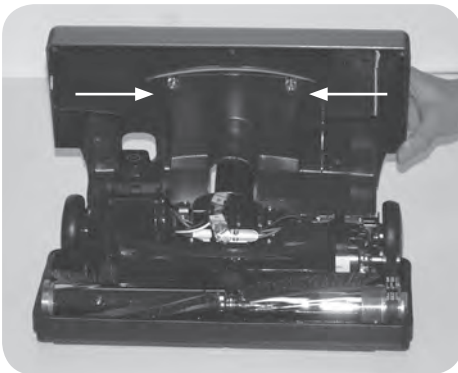


Fig. 18

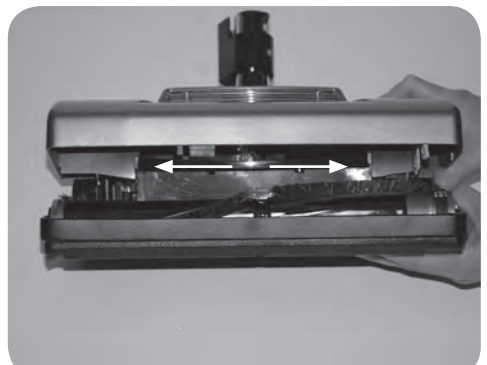


Fig. 19

Troubleshooting Guide

Please check each item below if you have trouble with your vacuum.
Before checking, ensure the vacuum is unplugged from the power supply.

Problem	Check Point	Solution
<ul style="list-style-type: none">• Suction power is weak.	<ul style="list-style-type: none">• Vacuum bag.• Wand or hose.	<ul style="list-style-type: none">• If bag is full, replace it.• If clogged or blocked, remove the object.
<ul style="list-style-type: none">• Vacuum does not work.	<ul style="list-style-type: none">• Is the hose adapter inserted into the vacuum completely?• When the vacuum bag is full or if the wand or hose is blocked, the motor thermal protection is activated.• Is the wand cord connected completely into the handle and the canister?	<ul style="list-style-type: none">• Insert it completely.• Unplug the vacuum and check the bag, wand and hose and remove any blockages. Press the red reset button on the power nozzle and resume vacuuming.• Insert it completely.
<ul style="list-style-type: none">• Power cord does not rewind.	<ul style="list-style-type: none">• Power cord.	<ul style="list-style-type: none">• Pull the power cord out a little and press the cord rewind button again.
<ul style="list-style-type: none">• Power cord won't pull out of the vacuum.	<ul style="list-style-type: none">• Power cord.	<ul style="list-style-type: none">• Do not pull the cord by force. Rewind it a little by pressing the cord rewind button and try pulling it out again.